

Nixie Epoch Calibration

www.TungstenCustoms.com

If your Nixie Epoch clock runs fast or slow, there is a way to fix it.

Adjusting your clock's calibration:

Press and hold the set button for a while (somewhere around 10-15 seconds) until the display changes to a number between 4000 and 6000. Keep holding the set button while pressing the hour or minute buttons to adjust this number up (to speed up the clock) or down (to slow it). The units are seconds per day, from a baseline of 5000. To exit calibration mode, release the set button and press the minute button.

An example:

Say your clock was losing two minutes per day. To fix this, you would want to adjust the calibration number up (to speed up the clock) by 120. Press and hold the set button until you view the calibration number, then press the hour or minute button until you've added 120 to whatever the number was when you first saw it. Then release the set button and press the minute button.

WARNING:

It should never be necessary to open up your clock. If you decide to poke around inside, Tungsten Customs takes no responsibility for the effect on you or the Nixie Epoch.

Questions?

Email: support@TungstenCustoms.com

